

RCMS

1 clear rls infomation

clea rls infomation [port *num*]

RCMS	rcms	port
port		

```
rcms#clea rls infomation port 1
rcms#
```

2 clear rls session

LIMP(RLS)

clea rls session [id *num*]

RCMS	
LIMP	id

```

1
rcms#clear rls session
rcms#

2
rcms#show rls session
connect id          IP
61             192.168.199.61
41             192.168.201.19
rcms#clear rls session id 61
rcms#

```

3 debug rls

```

,
debug rls

```

```

RCMS
user:          debug
data:
event:        LIMP(RLS)

rcms#debug rls user
rcms#

```

4 facility enable

facility enable level *num* secret {0|7} line
no facility enable

LINE

RCMS

level *num* : 1-32, 15

6 rls ip

rcms_config.ini


```

Vendor :1 , type:3:
    DOWN CFG: copy xmodem flash:config.text
y    DOWN SENS: copy xmodem flash:script.text
    UP CFG: copy flash:config.text xmodem
    CLEAR CFG :copy flash:default.text flash:config.text
y    RELOAD:reload
    WAIT RELOAD:120

RCMS#

```

9 show rls infomation

```

RCMS      tty
show rls infomation

```

```

RCMS
      tty

```

```

RCMS#sho rls infomation
RLS client socket id :0 , ip addr:0.0.0.0

PORT:0 idle
    book id:0 , user ip:0.0.0.0 , autosave interval:0
    facility type 0 , facility vendor:0
    time left:0, facility ready and not allow use

PORT:1 idle
    book id:0 , user ip:0.0.0.0 , autosave interval:0
    facility type 0 , facility vendor:0
    time left:0, facility ready and not allow use

PORT:2 idle

```

book id:0 , user ip:0.0.0.0 , autosave interval:0
facility type 0 , facility vendor:0
time left:0, facility ready and not allow use

PORT:3 idle

book id:0 , user ip:0.0.0.0 , autosave interval:0
facility type 0 , facility vendor:0
time left:0, facility ready and not allow use

PORT:4 idle

book id:0 , user ip:0.0.0.0 , autosave interval:0
facility type 0 , facility vendor:0
time left:0, facility ready and not allow use

PORT:5 idle

book id:0 , user ip:0.0.0.0 , autosave interval:0
facility type 0 , facility vendor:0
time left:0, facility ready and not allow use

time left:0, facility ready and not allow use

PORT:11 idle

book id:0 , user ip:0.0.0.0 , autosave interval:0

facility type 0 , facility vendor:0

time left:0, facility ready and not allow use

PORT:12 idle

book id:0 , user ip:0.0.0.0 , autosave interval:0

facility type 0 , facility vendor:0

time left:0, facility ready and not allow use

PORT:13 idle

book id:0 , user ip:0.0.0.0 , autosave interval:0

facility type 0 , facility vendor:0

time left:0, facility ready and not allow use