



- 
- RG-AP130(L) V2

802.11b/g/n

AP

2.4GHz 5GHz

MIMO

1167Mbps

- 86mm

- Web

Anyone

Anytime

Anywhere

AnyTerminal

Anyevice 5A

AP130(L) V2

AP130(L) V2

AP130(L) V2

AP130(L) V2

AP130(L) V2

RG-AP130(L) V2

 
;

V


Web

V

AP130(L) V2

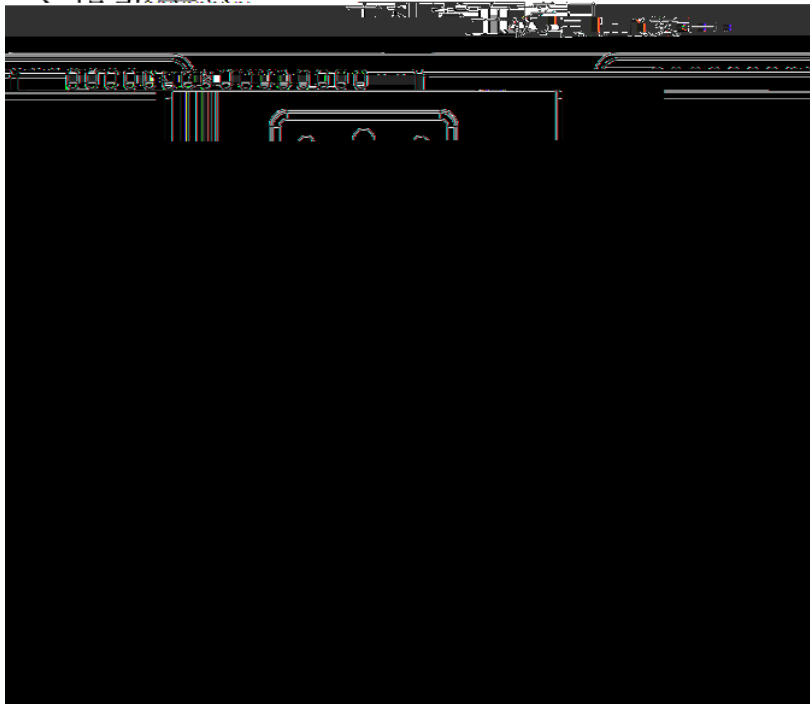

 1 1 10/100/1000Mbps
PoE ;
2 4 10/100Mbps
;

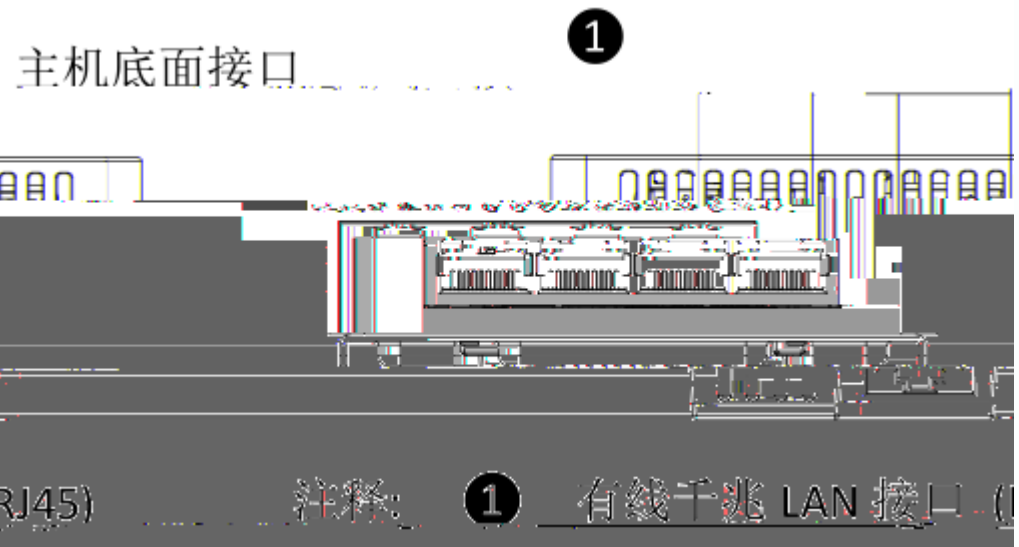


	RG-AP130(L) V2
(L × W × H)	116mm * 86mm *39mm
	1167Mbps
	802.11a/b/g/n/ac
	<100mw 20dBm
	3dBi
	4 10/100Mbps
	1 10/100/1000Mbps
PoE	802.3af
	<8W
	0 ~+45
	5%~95%
	IP41
	0.3kg

RG-AP130(L) V2

1


SYS

 ,

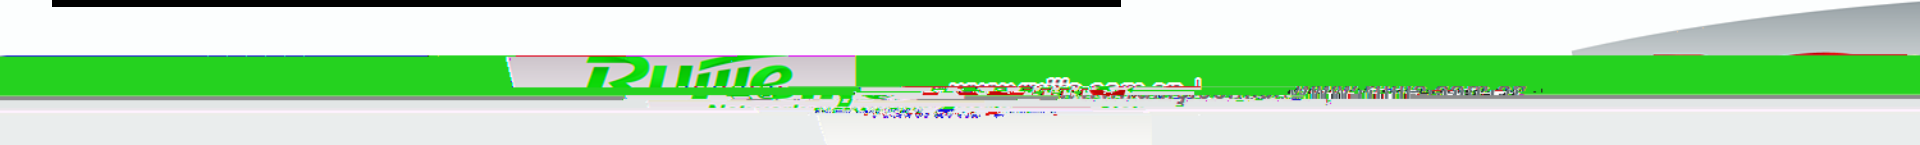

AP130(L) V2

 步骤一：用螺丝刀取下墙壁上的 86 面板盒（如果没有，则忽略此步骤）。

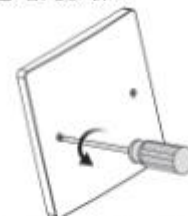


步骤二：将支架左右两边孔洞对准 86 底盒的螺丝孔，然后用螺丝刀把 M4*25 2 颗螺丝分别拧入（注意支架方向，UP 朝上）。



孔插入，将主机

支架倒置

 RG-AP130(L) V2

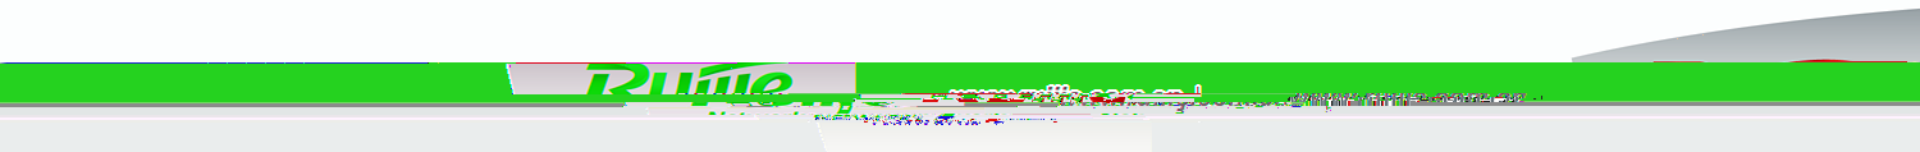

AP130(L) V2

AP130(L) V2

AP130(L) V2

AP130(L) V2

AP130(L) V2



AP130(L) V2

AP130(L) V2

AP130(L) V2

 
AP130(L) V2

AP130(L) V2

AP130(L) V2

AP130(L) V2

86

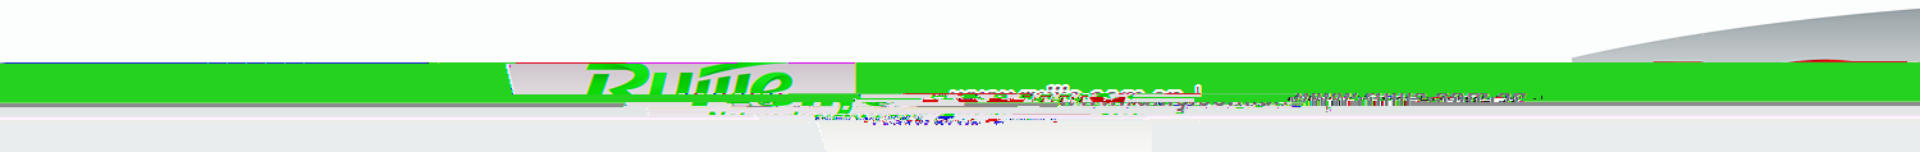

AP130(L) V2

AP130(L) V2

AP130(L) V2

AP130(L) V2

AP130(L) V2

PoE

 
PoE

802.11af

AP

AP

AP

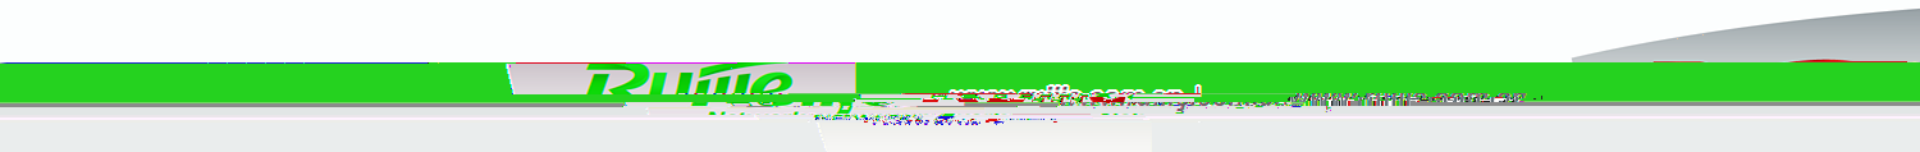



29

A 11

100036

Office Tel: 010-51718888 Mobile Tel: 13888888888 Fax: 010-51718888

www.ruijie.com.cn E-Mail: xxx@ruijie.com.cn