







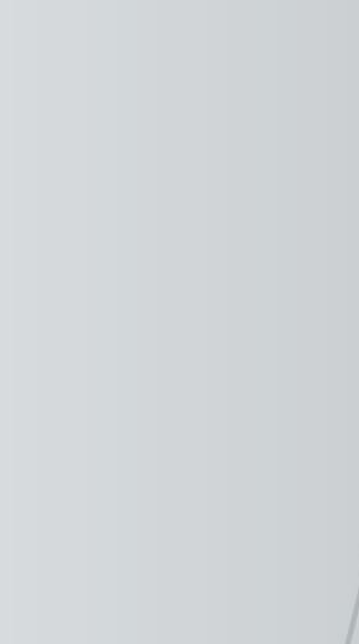

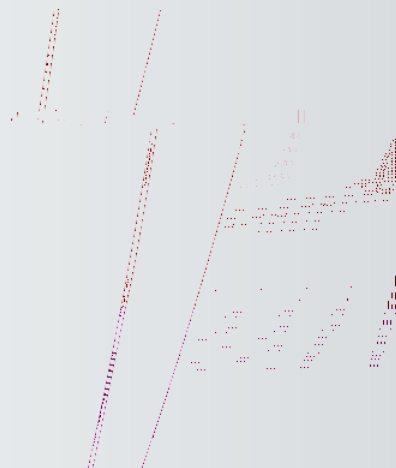

Ritmo

www.ritmo.com.br

I

--

/

Ritmo

WWW.RITMO.COM.BR

CPU
CPU

CPP

CPU

CPU

/

CRC

show mac-address-table count
show run

CPU

show cpu cpu

Ruijie#show cpu

```
=====
CPU Using Rate Information
CPU utilization in five seconds: 10.20%
CPU utilization in one minute: 8.40%
CPU utilization in five minutes: 8.40%
```

show	CPU
„ CPU utilization in five minutes †	50%
CPU	70%

4008-111-000



=

CPU

CPP

CPU

CPU

show cpu-protect

cpu

drop

2-3

show cpu-protect)

ó

show memory

Ruijie#show memory

System Memory: 253952KB total, 52940KB used, 201012KB free, **20.8%
used rate**

Used detail: 34396KB active, 14000KB inactive, 14776KB mapped, 5472KB
slab, 5012KB core, 0KB others

75%

80%


4008-111-000

```

Interface : GigabitEthernet 0/1
 10 seconds input rate :0 bits/sec, 0 packets/sec
 10 seconds output rate :0 bits/sec, 0 packets/sec
RX load
dropped packet events (due to lack of resources): 0
packets received of length (in octets):
 64 : 0
 65-127 : 0
 128-255 : 0
 256-511 : 0
 512-1023 : 0

```

每秒内报文递增的比率，可以帮助快速发

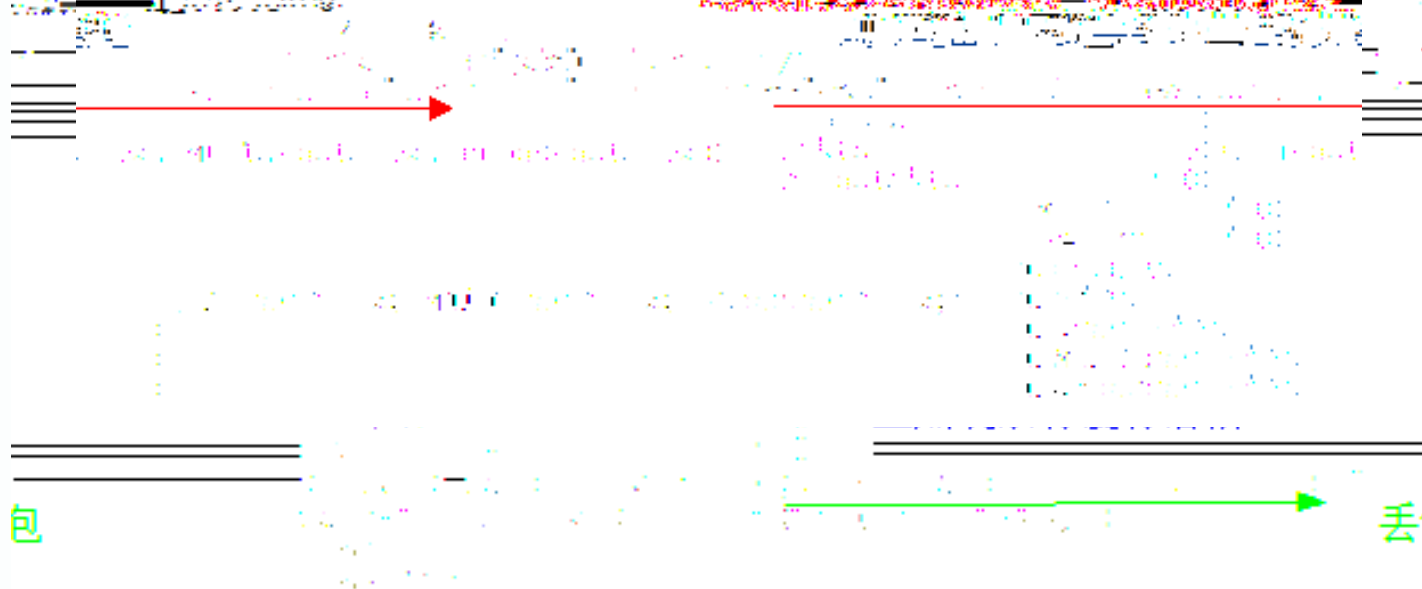

show log

Ruijie#show log

*Jan 1 00:00:15: %LOCAL_DP-5-LC_PROB: Board information in this chassis has been collected.

*Jan 1 00:00:15: %SWITCH-6-INSTALL: Install chassis S1920-8GT2SFP on switch 1

*Jan 1 00:00:15: %DP-6-MASTER: Module in slot 0 has td ed to master.

show log



=

MAC

SNC
ARP

RIIL

CPU
TRAP

MIB

MIB
OID

4008111000





console



console

PC

COM



Console

console



status



PC

9600

COM

”

†

COM



console





AP

show aggregateport load-balance
balance

AP
aggregateport load-



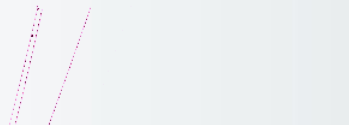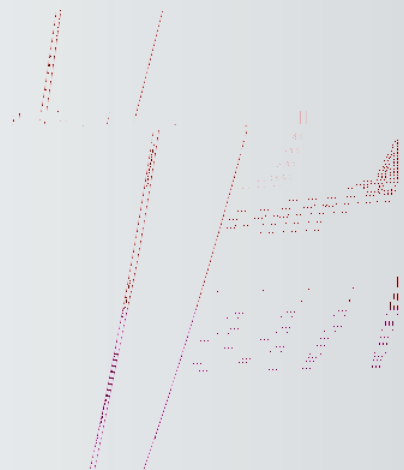



/

)

/

PING

SNMP

10.X

S86 S12000

4008111000

Ruijie#show version detail	//		
Ruijie#show version slot	//		
Ruijie#show run	//		
Ruijie#show cpu	//	cpu	
Ruijie#show cpu-protect	//	cpu	2
Ruijie#show memory	//		
Ruijie#show interface		3-5	show

www.ruijie.com.cn

www.ruijie.com.cn/service.aspx

support.ruijie.com.cn

webchat.ruijie.com.cn

4008-111-000