



A

A

RG-AM5532-A RG-AM5528(ES)

A RG-AM5532-A RG-AM5528(ES)-A, RG-MAP852-A(V3)

A RG-AM5532-A RG-AM5528(ES)-A, RG-MAP852-A(V3)

A RG-AM5532-A RG-AM5528(ES)-A, RG-MAP852-A(V3)

A RG-AM5532-A RG-AM5528(ES)-A, RG-MAP852-A(V3)


1.

2.

3.

4.

A

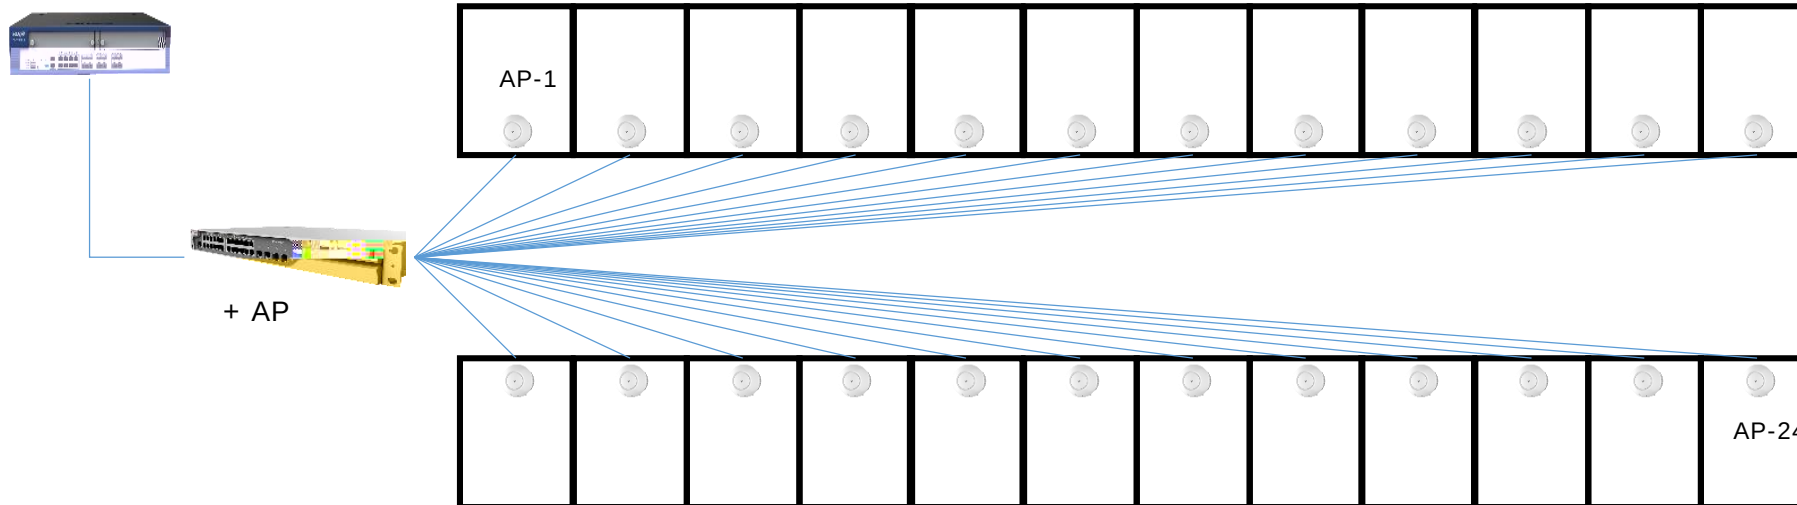

- AP 100 AP
- AP 24 AP AP 802.11ax
- AP AP
- AP 24V POE AP MCU POE



业务
管理

...

AP

AP

AP

AP

24

AP

• AP

AP
AP

AP

AP

AP

• AP

IP

AP

• AP

AP

AC

- AP AP AC AC
- 11ax
- AP AP
- AP 20G



• AP

AP

AP

• AP

AP
AC

AP



- AP

AP


AP

- AP

AP

AP

- WLAN

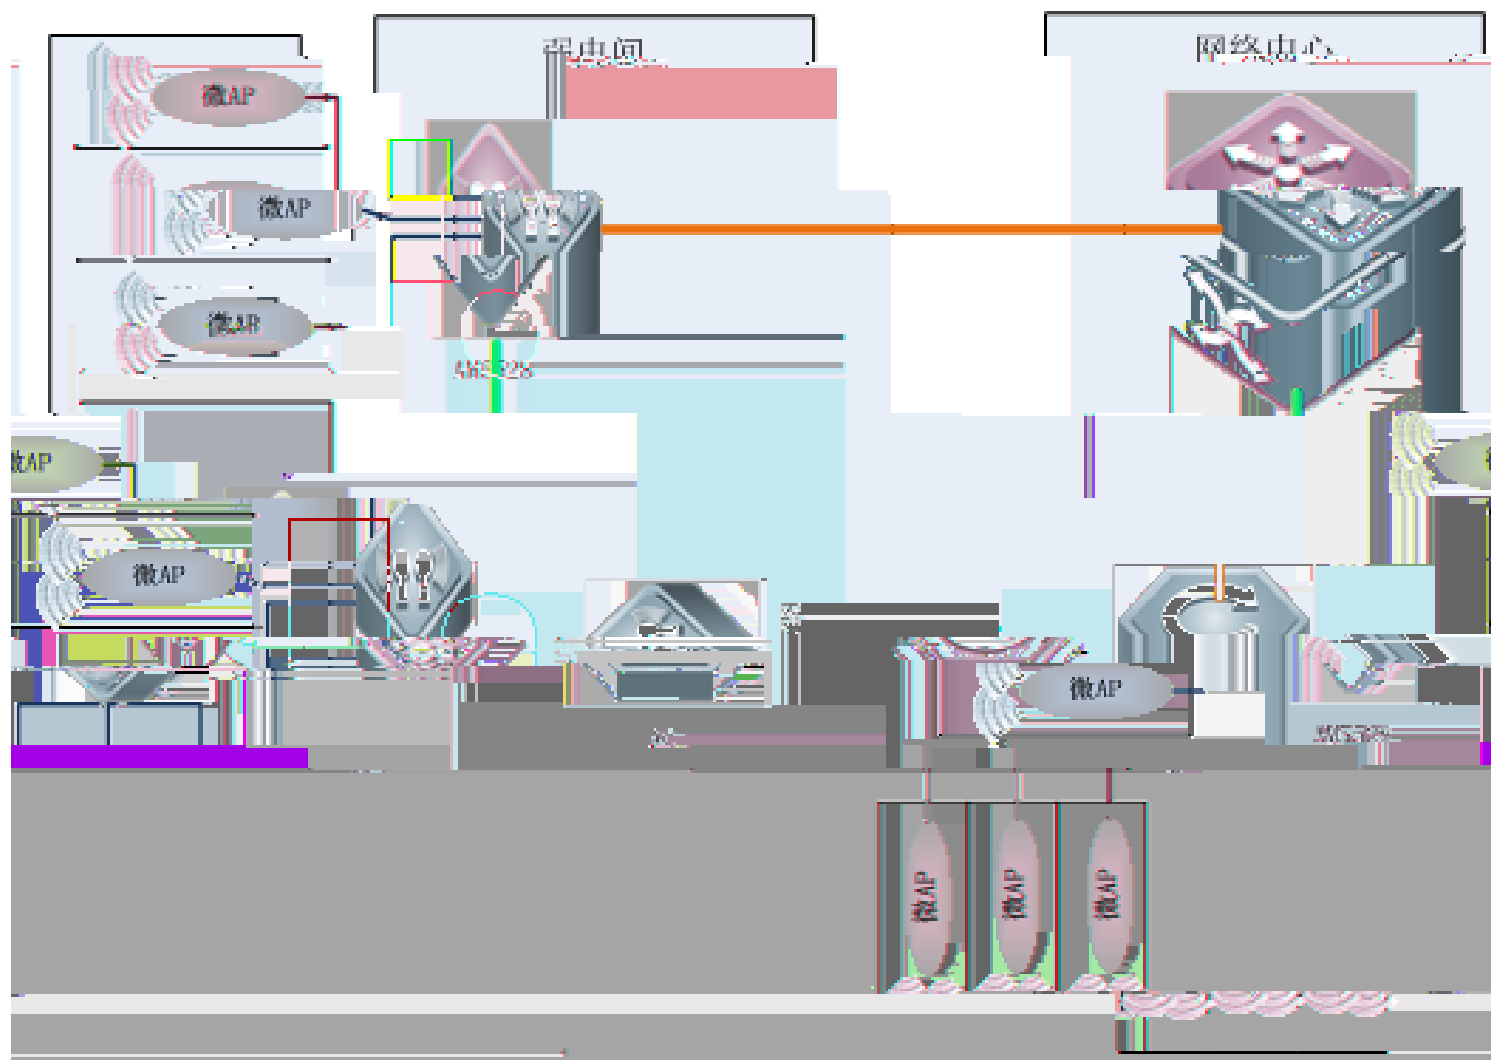

1.

2.

3.

4.

—RG-MAP852-A(V3)



RG-MAP852-A(V3) 2 5
1 Micro Usb Console
AM
AM

WAN AP
WAN



1.

2.

3.

4.

AP

1. LED

AP

show poe interfaces status

poe support force-enable

no poe

support force-enable

log

2. show interfaces status

up

AP

boot

10min

AP

AP

)

AP

3. show mac-address-table

AP

AP mac

Micro-USB

log

4. show ip dhcp binding

ping

AP

Micro-USB

log

5. show tftp-

AP

1. show run show ac-config active-file AP
2. AP show run tftp

```
ruijie#sh run | i tftp
tftp-server enable
tftp-server topdir flash:/decompress_appkg
```

3. AP AP

```
ruijie#cd decompress_appkg
ruijie#dir
Directory of flash:/decompress_appkg
Number Properties  Size           Time           Name
-----
1      -rwx      16.3M      Wed Aug 3 21:31:31 2016  main_map552.bin //
```

4. AP IP

AP show ip dhcp binding show mac IP
ping

5. show dvmg state AP

AP

+

UP

+AP

(25 26)

auto

auto

Ap AC

AP

SSID

AP AP

AP

+AP RTR

show version all slot

+

AP AP

AP AP

1.

2.

3.

4.



		AP
		AP
		AP Link Down
	3 1	FITAP AP AC CAPWAP
	0.2 0.2	FITAP MACCAP AP
	3 1	CAPWAP
	0.2 0.2	FITAP AP AP

A

AM55xx

Fit

RG-MAP852-A(V3)

USB

MicroUSB

USB

PPT



THANKS

29

A 11

100036

Office Tel: 010-51715999

Fax: 010-51413399

4008-111-000

www.ruijie.com.cn

